


To assemble battery cover, press back hinges into position as shown. (A) Close cover to allow the two tabs to secure the door. The


cover can be reopened for battery placement, by pressing on both tabs at once and lifting. (B) Insert two "C" batteries in positions shown. (C)

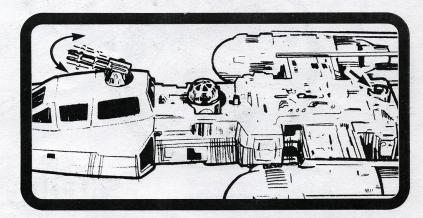

CANNON OPERATION

Activate top cannon turret motion and sound by pressing rear dark gray button.

Cannon can be aimed manually.

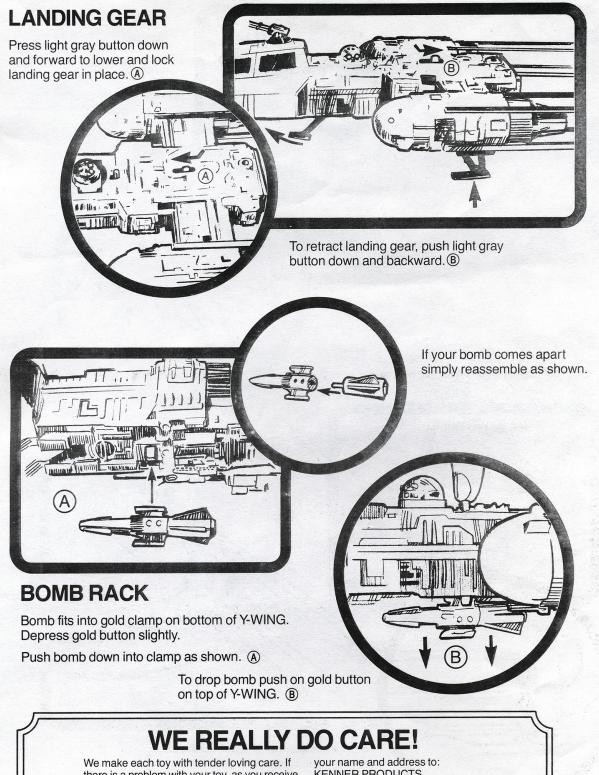

We make each toy with tender loving care. If there is a problem with your toy, as you receive it, please let us know. Simply describe the problem and mail that description along with your name and address to: KENNER PRODUCTS Consumer Relations Dept. 1014 Vine St., Cincinnati, Ohio 45202.